

<i>SE7</i> <small>x100kPa °F PSI/MPH °C/km/h</small>	→ SET: Setting of units "kPa, , km/h" or "PSI, °F, MPH"
<i>SP-5</i>	→ SPEED SET: Setting of speed pulse
<i>P-4</i>	→ PULSE-4: Select the proper speed pulse from 2, 4, 8, and 16.
<i>FREE</i>	→ FREE: Set speed pulse other than 2, 4, 8, or 16.
<small>x1000RPM</small> <i>7R-5</i>	→ TACHO-SET: Setting of number of cylinders
<small>x1000RPM</small> <i>E-4</i>	→ ENGINE-4: Select the proper number of cylinders from 3, 4, 5, 6, and 8.
<small>W.TEMP DILT.</small> <i>-UP</i>	→ WARM-UP: Setting of warm-up function
<i>SPL.</i>	→ SPECIAL: Choose ON or OFF of special display.
<small>x1000RPM</small> <i>7R-r</i>	→ TACHO-REV: Setting of warning value for engine speed
<small>x1000RPM</small> <i>7R-b</i>	→ TACHO-BAR: Choose ON or OFF of bar display.
<i>WJ-b</i>	→ WARNING-BUZZER: Choose ON or OFF of buzzer sound.
<i>A-WJ</i>	→ AUTO-WARNING: Choose ON or OFF of auto warning display.
<i>d, n7</i>	→ DIMMER: Choose AUTO or MANUAL of illumination control.
<i>A-d</i>	→ AUTO-DIMMER: Auto dimmer control
<i>n7-d</i>	→ MANUAL-DIMMER: Manual dimmer control
<i>A-L3</i>	→ AUTO-LEVEL3: Select one from three levels of brightness in auto dimmer mode.
<i>n7-3</i>	→ MANUAL-3: Select one from five levels of brightness in manual dimmer mode.
<i>[- 0</i>	→ CONTROL-OUT: Setting of control output function
<i>OPEN</i>	→ OPEN: Disconnection of wire and/or sensor is detected.
<i>Short</i>	→ SHORT: Short circuit of wire and/or sensor is detected.
<i>Err.</i>	→ ERROR: Serial error is detected.

Refer to the operation manual for the details.